



Illumination Station - 37456

ASSEMBLY INSTRUCTIONS

 
Customer Service

For questions regarding this product, or to receive replacement or missing parts, contact Customer Service at (800) 334-2014. Please have the model number and part number(s) located in this Assembly Instruction sheet available for reference.


For ages 3+ .

⚠ WARNING: Adult assembly required.



Hardware and Parts

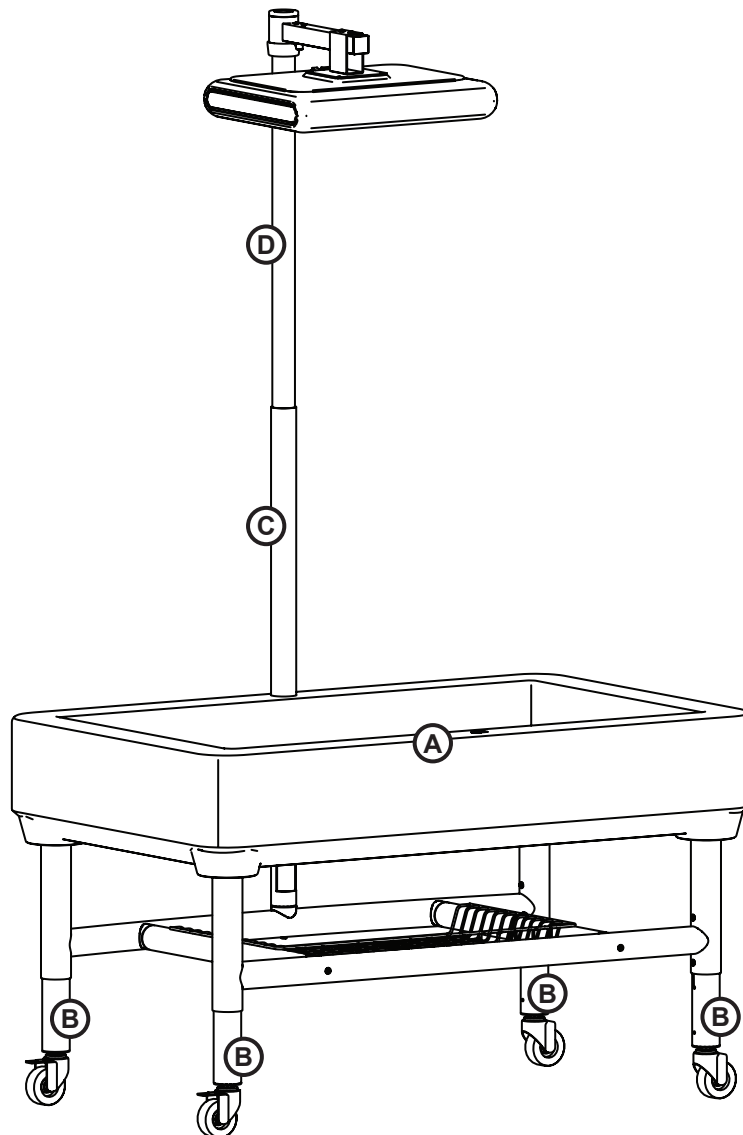





Hardware and Parts

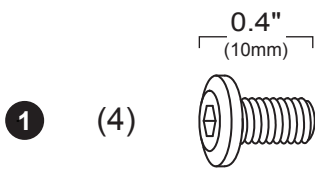 



5 (1)

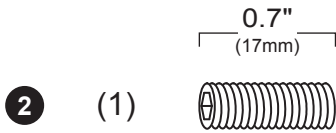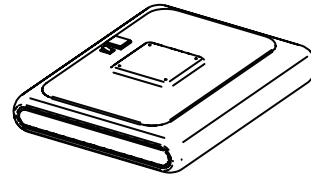  

6 (1)

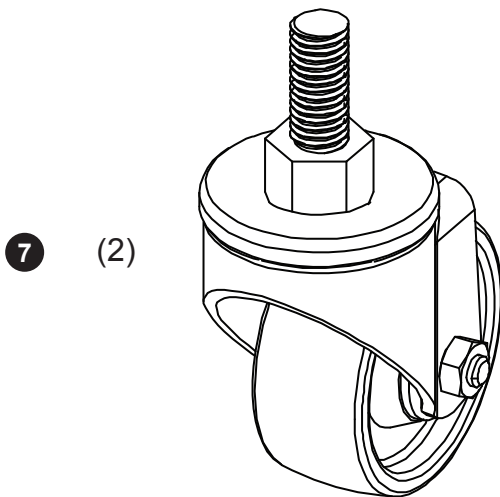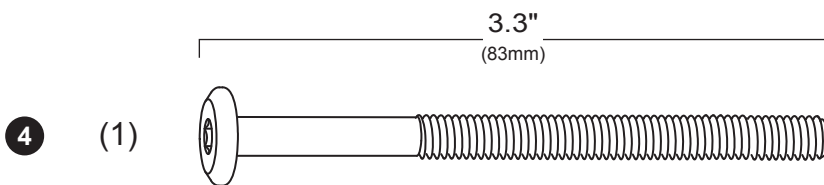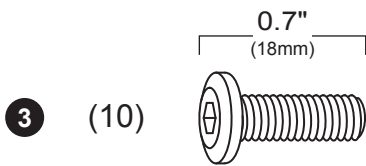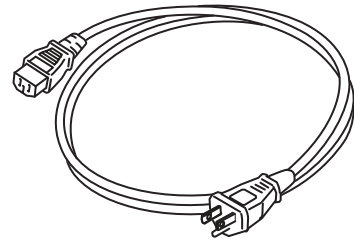    


8 (2)

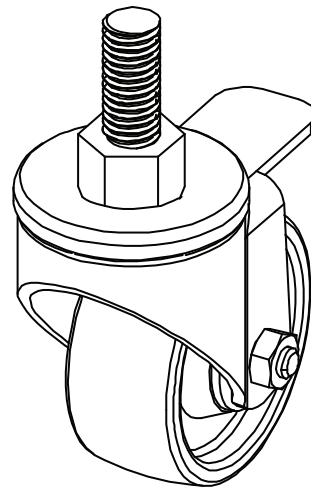  


You will also need a Phillips-head screwdriver
(not included).



 
Step 1

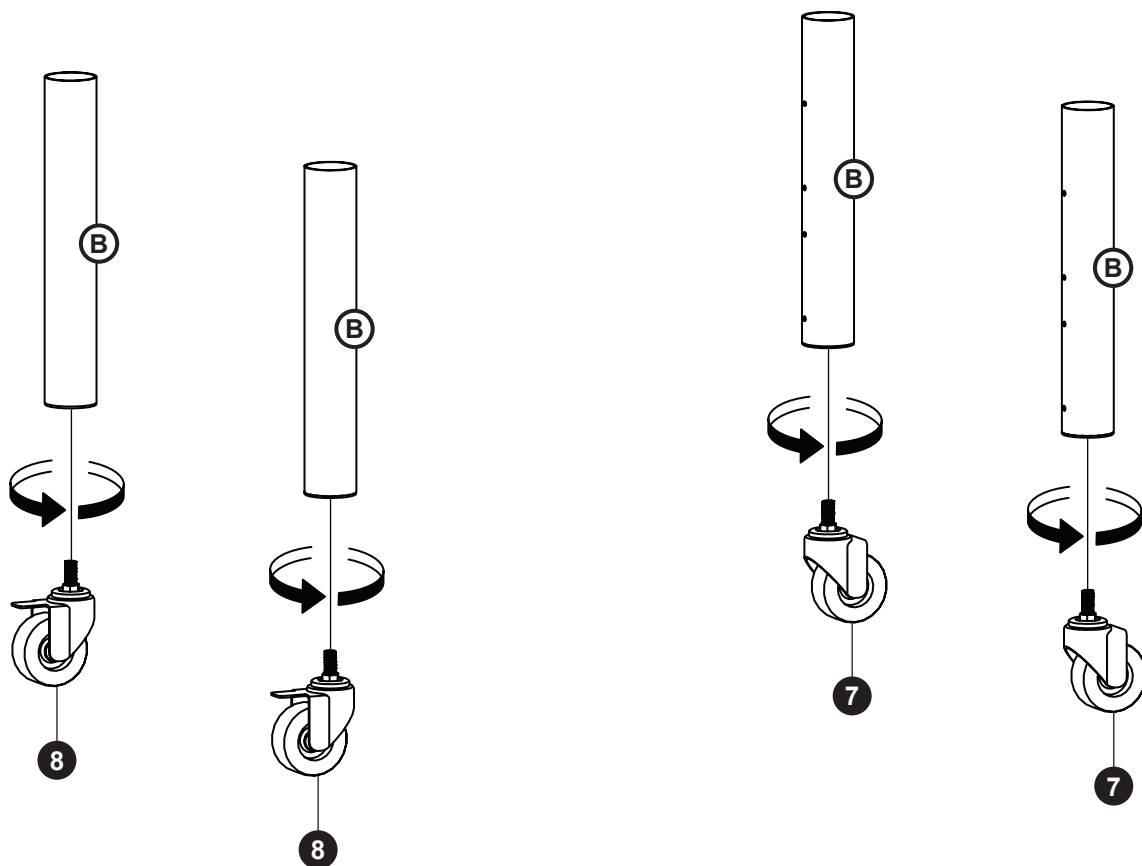

 
Step 2

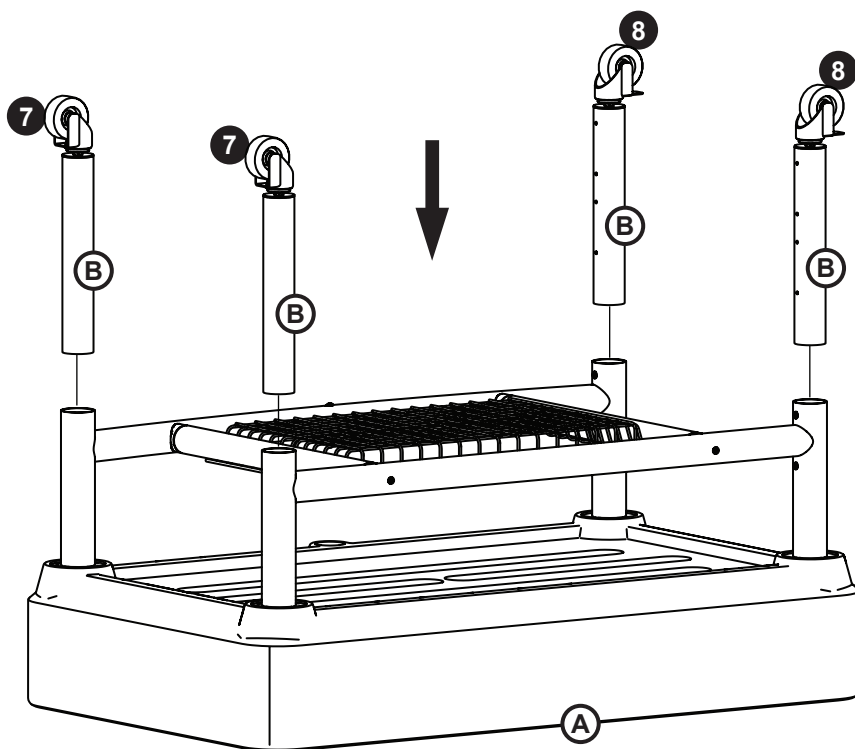

 
Step 3

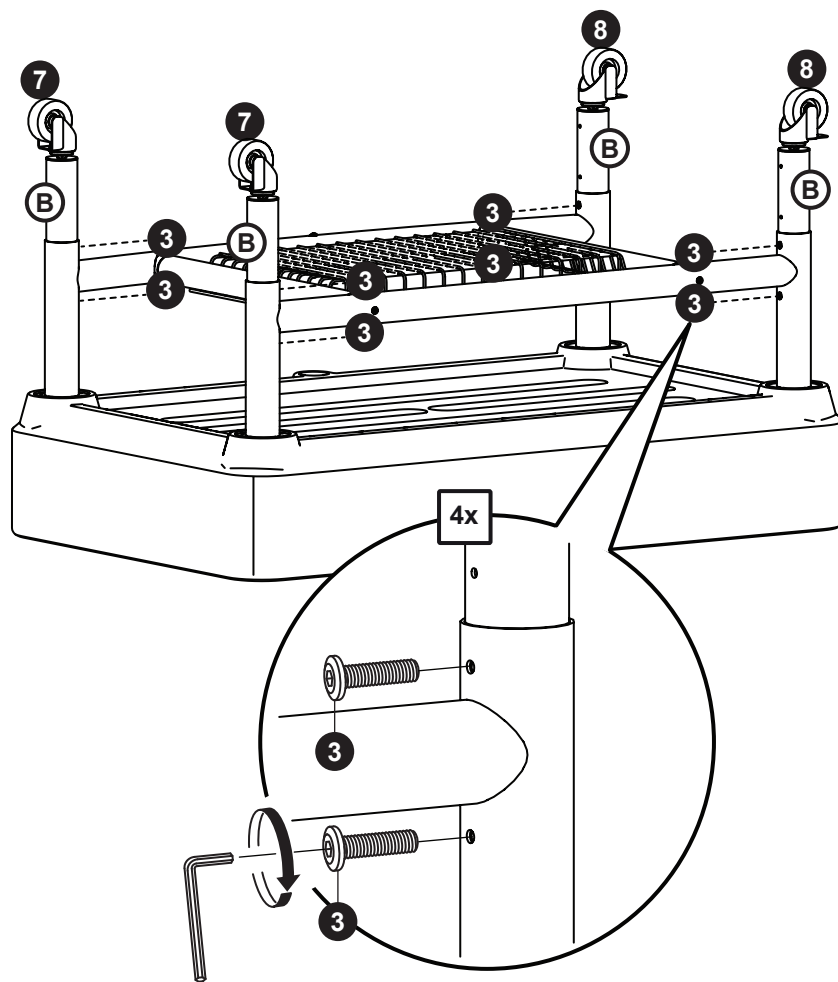

 Step 4

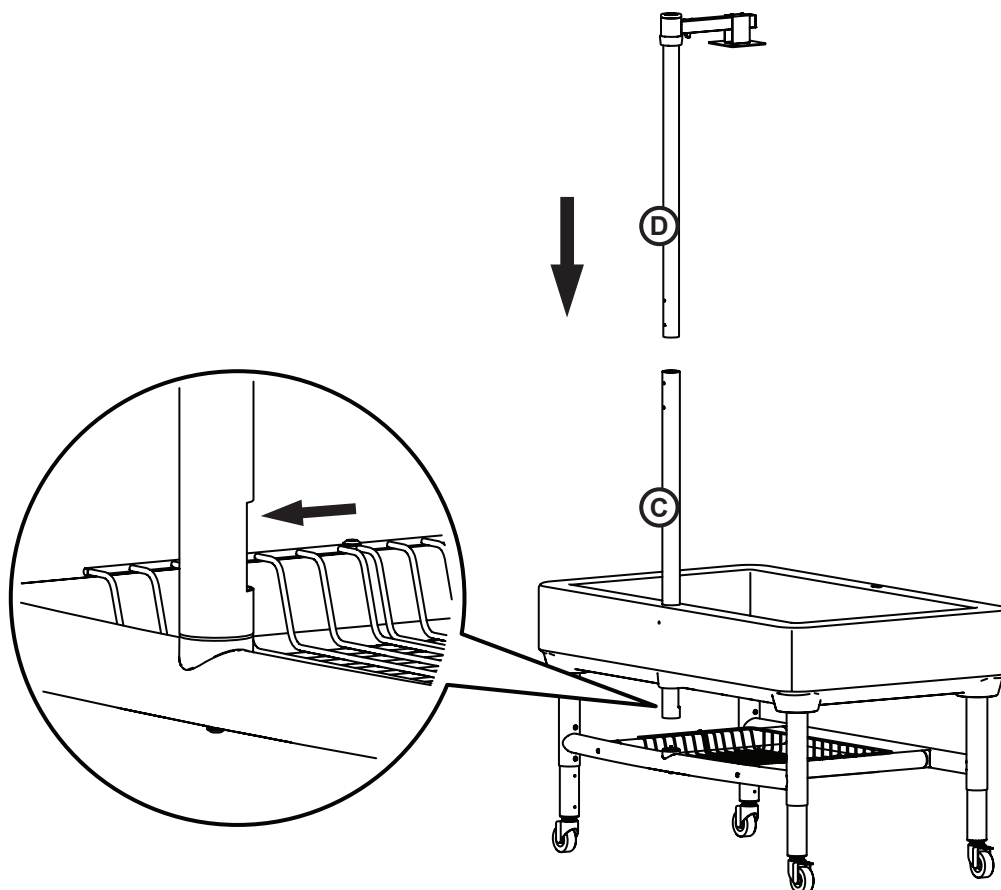

 Step 5

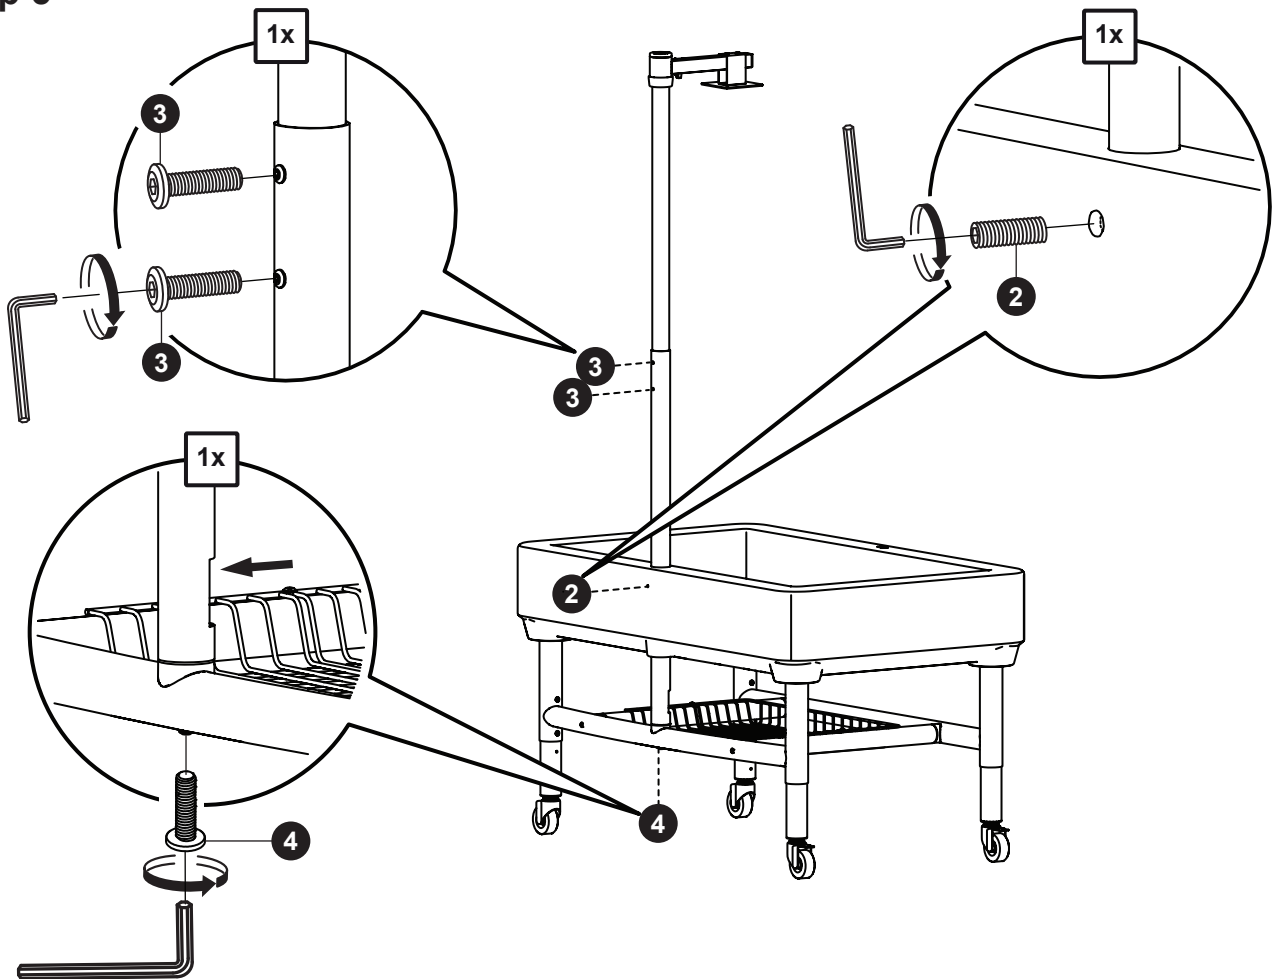

Step 6



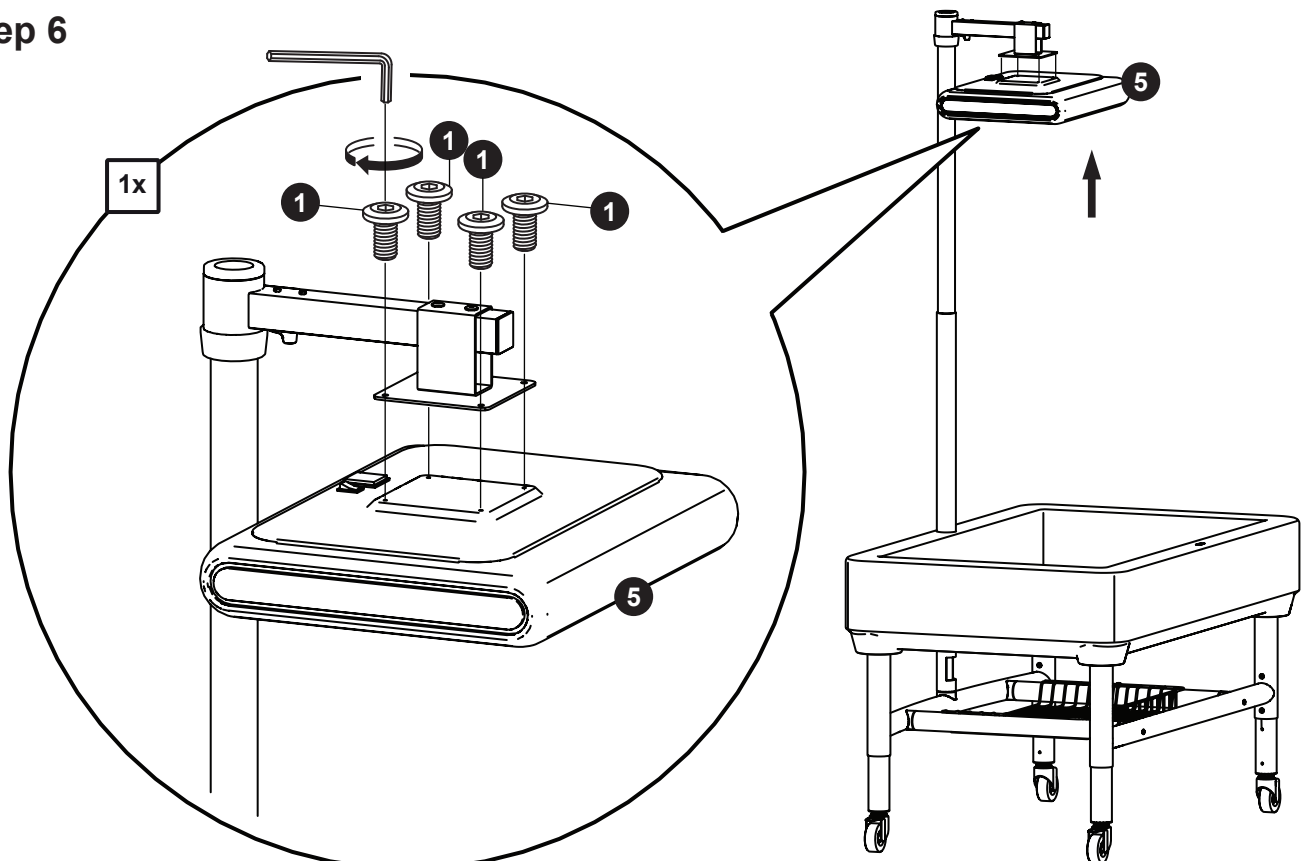


Diagram illustrating the assembly of the mobile cart. Callout 5 shows the top platform being attached to the main frame. Callout 6 shows the bottom platform being attached to the main frame.

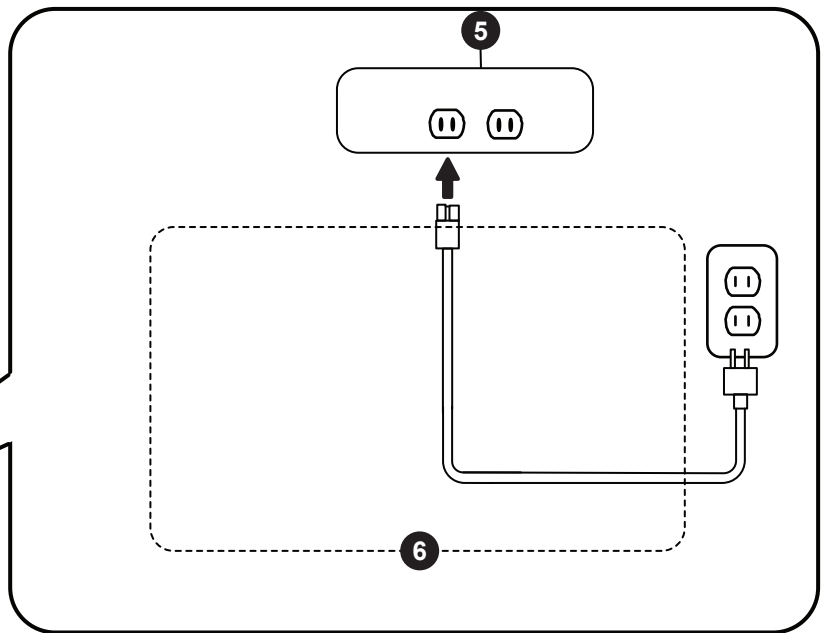

The diagram illustrates the mobile cart with two circular callouts providing detailed views of the locking mechanisms. The top callout shows a hand turning a knob clockwise, indicated by a curved arrow, to lock the cart. The bottom callout shows a hand turning a knob counter-clockwise, indicated by a curved arrow, to unlock the cart. Both callouts include a padlock icon to indicate the locked state.

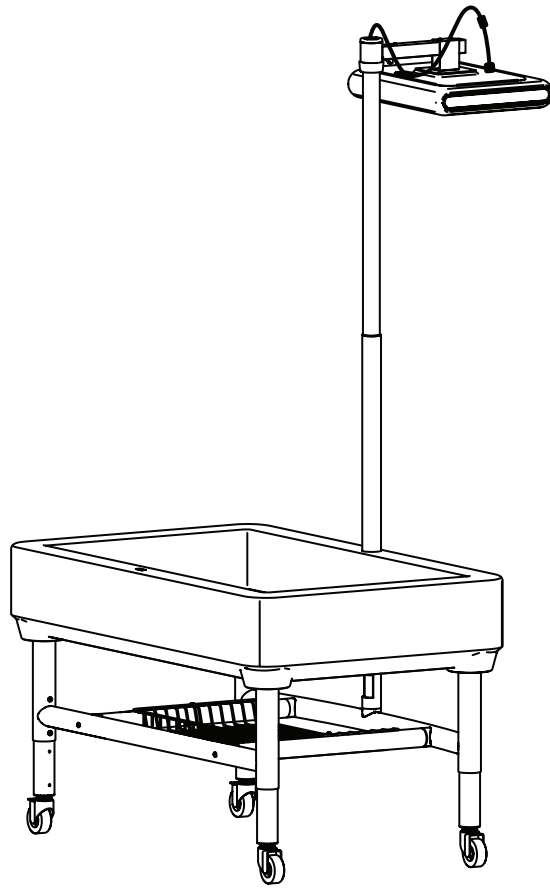

OR

